


- Scan the QuickMark of Samilportal APP below and download it into mobile phone.





- Complete the DC and AC wiring and turn on DC switch. Then the LED lights begin to flash alternately in term of red, green, blue.
- Connect the WiFi hotspot of the inverter: Samil\_XXXXXXXXXX.



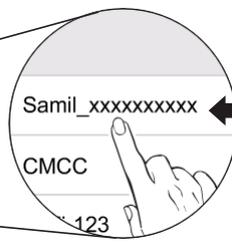


XXXXXXXXXX is the 10 bit series number of the inverter



- Click the SamilPortal APP.
- Select "Local mode" in the "mode select" interface and enter the login interface.

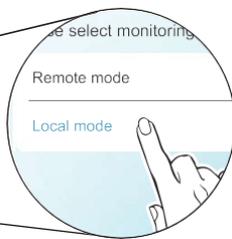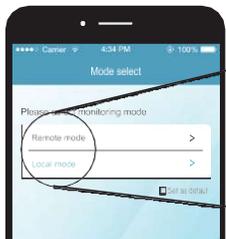

- Select "User" in the login interface. Input the password (the default password is 111111 ) and enter the initialization interface .

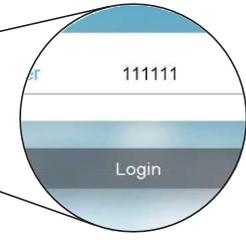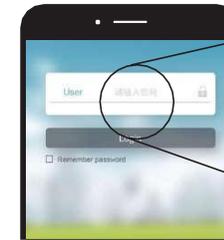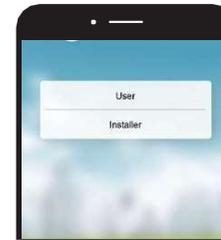

- Set the "Grid code" and "Date and time" in the initialization interface. Press "√" to confirm. After both of the parameters are set, click "Done" and finish the initialization.

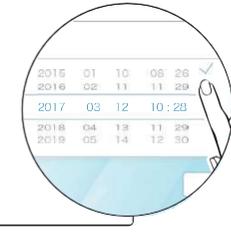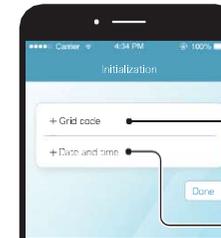

The inverter performs self-tests and checks the AC-grid. The inverter starts operation after a few minutes.